

Quick Hanging Knob & Screw Installation Instructions: SOUND ABSORPTION SHEETS & ISOLÉ

The Sheets hang from 3 metal grommets at the top. Hang sheets with label facing out.



Items needed: 3 included quick hanging knob and screws with anchors, a tape measure, a level, a hammer, a pencil, and a power drill with a 1/4" drill bit.



Step 1: Use a tape measure to measure the distance between the grommets.




Step 2: Use a level and draw a level line with a pencil for where the sheet will hang.




Step 3: Mark the locations of the grommet holes with a pencil.



Step 4: Use a power drill and a 1/4" drill bit to drill holes in the marked locations.

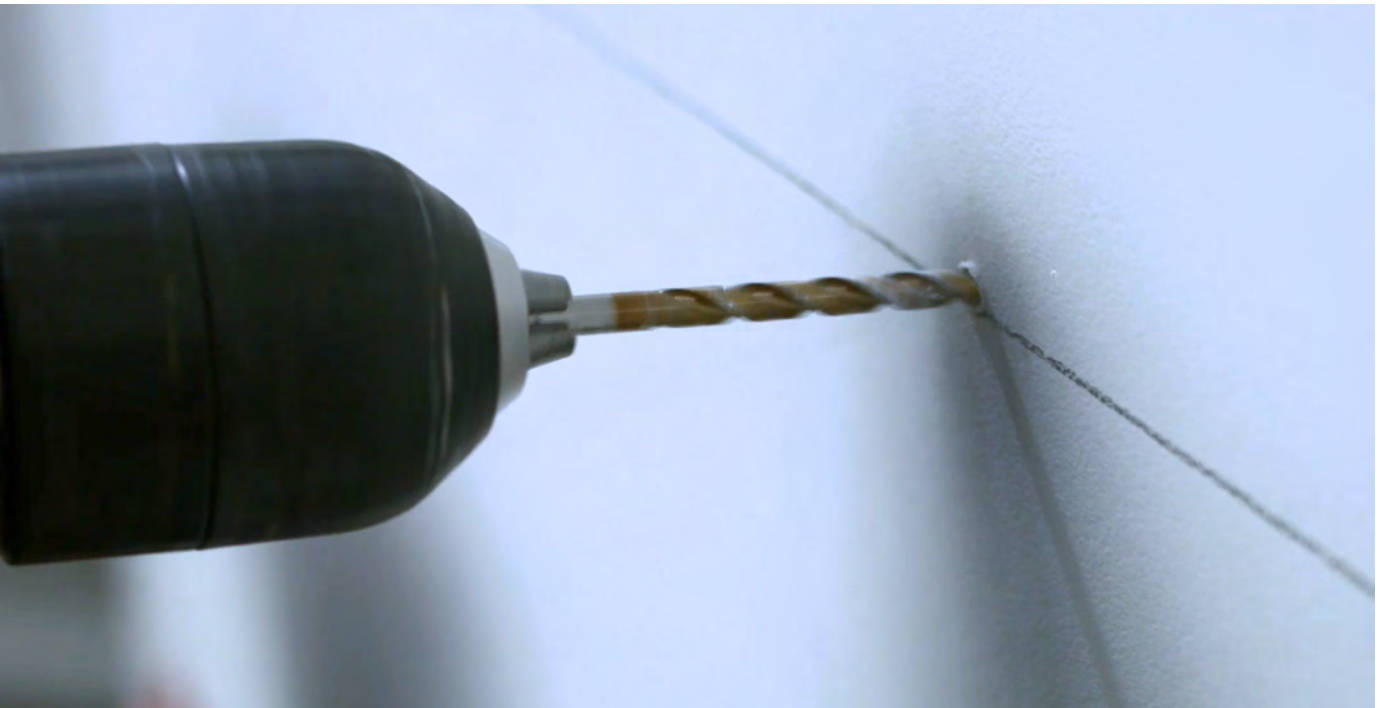


Step 5: Use a hammer and carefully tap the wall anchors into the drilled holes.

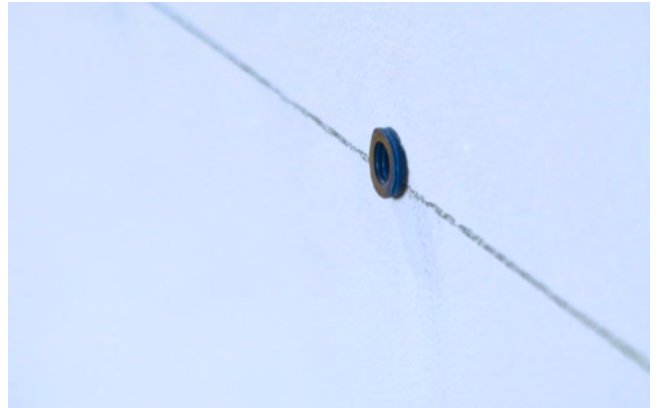


Step 6: Screw the knob onto the screw, then insert the knob and screw through the sheet and screw clockwise into the anchor.



Step 6 (Optional): Screw the knob onto the screw, then screw clockwise into the anchor, then remove the knob, hang the sheet, and screw the knob back on.

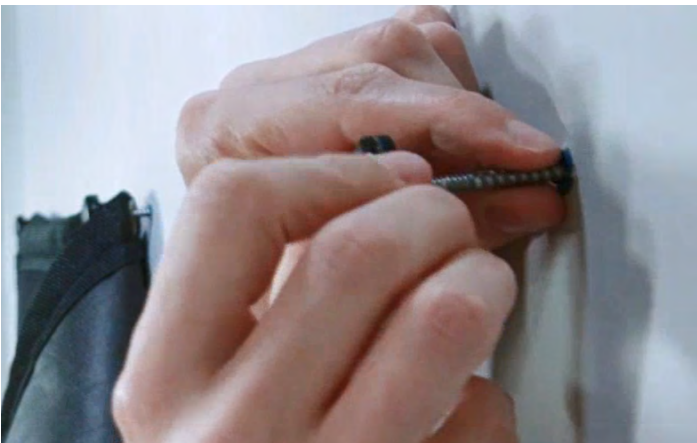

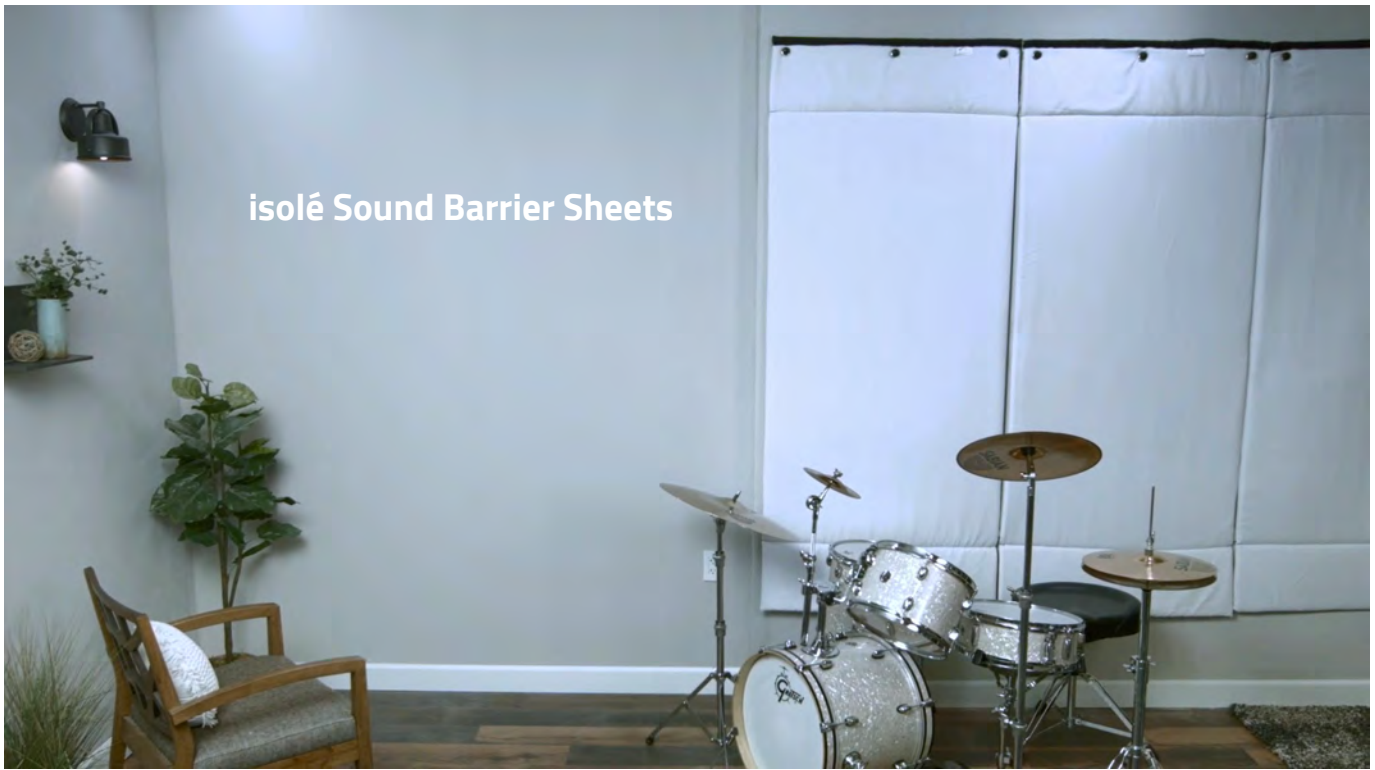

isolé Sound Barrier Sheets



Sound Absorption Sheets



AUDIMUTE™
sound management solutions

Audimute.com
1.866.505.MUTE